



Cutwater Boats Factory Tech - Do It Yourself

Launch and Retrieve

These instructions and accompanying video are based on the Cutwater 30 Sedan. All Cutwater Boat models can be launched/retrieved using a similar process with minor variations. Please consult a professional if you're not comfortable performing this type of operation yourself.

Estimated Time:

15 minutes - launch

15 minutes - retrieve

Launch Instructions:

1. Insert and tighten drain plug
2. Remove safety straps and oversize load banner (Cutwater 26 & 28 do not require oversize load banner)
- Submerge trailer to front of bunks (may vary with ramp angle)
3. Open engine seacock (open generator and/or AC seacocks if applicable)
4. Switch "Engine", "House", and "Thruster" batteries on ("parallel" should be off)
5. Start engine (select helm first if applicable)
6. Confirm adequate water flow from exhaust
7. Loosen/remove winch strap and safety chain
8. Power or float boat off trailer and secure to dock
9. Raise/secure VHF antenna and mast

Retrieval Instructions:

1. Lower/secure VHF antenna and mast
2. Submerge trailer to front of bunks (may vary with ramp angle)
3. Power or float boat onto trailer until making contact with bow stop
4. Attach/tighten winch strap and safety chain
5. Turn engine off, close seacocks and switch all batteries off
6. Replace oversize load banner and safety straps

In no event will Ranger Tugs or Cutwater Boats be liable for any loss or damage including without limitation, indirect or consequential loss or damage, or any loss or damage whatsoever arising from, or in connection with, the use of these instructions.